




Meet HERO11 Black

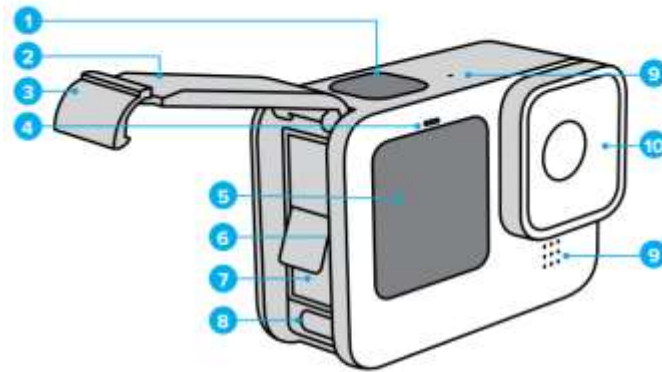

- | | |
|---|-----------------------|
| 1. Shutter Button  | 6. microSD™ Card Slot |
| 2. Door | 7. Battery |
| 3. Door Latch | 8. USB-C Port |
| 4. Status Light | 9. Microphone |
| 5. Front Screen | 10. Removable Lens |

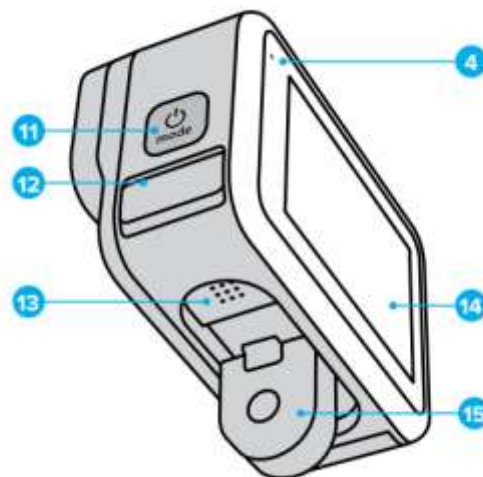

- | | |
|--|---------------------|
| 11. Mode Button  | 13. Speaker |
| 12. Drain Microphone
(Designed to drain water.
This is not a door/latch.
Do not try to open.) | 14. Touch Screen |
| | 15. Folding Fingers |

GoPr Hero 11 Basic Instructions

See the “Meet the Hero 11 Black” page to see what the # references are.

A. Taking video without a smart phone connected


To Start Recording Video:

Press the Shutter button (#1) [O]. The camera powers on and should automatically begin recording video. The camera status lights blink while the camera is recording.


To Stop Recording:

Press the Shutter button (#1) [O]. The camera stops recording and automatically powers off to maximize battery life.


To Turn On WITHOUT Automatic Recording

Press the Mode button (#11) [].

1. To Turn Off


Press the Mode button (#11) [] for 2 seconds until the Touch Screen (#14) says “Powering Off.”.

2. To Change between Video, Time Lapse, and Still Photos:

Press the button Mode button [] to turn camera on. Option 1: Swipe the Rear Touch Screen left or right until the Time Lapse [clock icon] or Video [video camera icon] or Photo [camera icon] appears on the Touch Screen.

Press the Shutter button (#1) [O] to begin recording or take a photo.

3. Charging the Go Pro

Press the Mode button (#11) [] for 2 seconds until the Touch Screen (#14) says “Powering Off.”.

Open the Battery compartment Door (#2) . Note that the Door Latch (#3) you need to pull is very tight.

Plug in the charging cord to the USB-C Port (#8) camera and into any USB charging port.

B. Using with Smartphone

You will need to download the **Quik** app onto your phone.

Turn on your Phone's Bluetooth to connect. The connection does not require WiFi or Data to connect to the phone app.


1. Connect a GoPro via Quik App

- a. Turn on the GoPro.
- b. Open the App on your phone. The screen should automatically show the "Connect a GoPro" button. If not, tap the GoPro Icon.
- c. There may be additional steps to connect to the HERO11 Black. Follow the app instructions Except, Do Not Allow for Auto Upload; Do Not Download new footage, Do Not Connect the camera to the cloud.

You may now control the camera from your phone.

- d. Click "Enable Preview"
- e. Select Time Laps, Video, or Photo
- f. Tap the Icon to begin recording or to take a photo.

2. Other Things You Can Do on the App


- a. Turn on/off the GoPro by tapping the  button
- b. Change Media type (Time Lapse, Video, Photo) by tapping the different icons.
- c. Adjust Video or Photo Settings
- d. **View Media** to images previously recorded

C. Voice Commands

Controlling Your GoPro With Your Voice

Voice Control gives you easy, hands-free control of your GoPro. It's great when you're busy with handlebars, ski poles, and more. Just tell your GoPro what you want it to do.


TURNING VOICE CONTROL ON + OFF

1. Swipe down on the rear screen to access the Dashboard.
2. Tap  to turn Voice Control on or off.

CAPTURING WITH VOICE CONTROL

With Voice Control on, you can simply tell your GoPro to start capturing.

Command	Description
GoPro, capture	Starts capturing with the mode your camera is set to.
GoPro, stop capture	Stops capture in Video and Time Lapse modes. Photo and Burst mode stop on their own.

PRO TIP: Saying "GoPro, capture" and "GoPro, stop capture" is the hands-free way of pressing the Shutter button . They will start and stop capture using the mode and settings you currently have on your camera.

Controlling Your GoPro With Your Voice

LIST OF VOICE COMMANDS

There are two types of voice commands: Action commands and Mode commands.

Using Action Commands

These commands let you switch modes on the fly. If you just recorded a video, you can say, "GoPro, take a photo" to snap a photo without manually switching modes.

Action Command	Description
GoPro, start recording	Starts recording video.
GoPro, HiLight	Adds a HiLight Tag to your video during recording.
GoPro, stop recording	Stops recording video.
GoPro, take a photo	Takes a single photo.
GoPro, shoot burst	Takes burst photos.
GoPro, start time lapse	Starts capturing with the last time lapse mode you used.
GoPro, stop time lapse	Stops capturing time lapse.
GoPro, turn off	Turns your camera off.